Folding Screen Door Assembly Guide

This guide covers assembly of the components shown. It does not cover fixing the frame into a doorway. Confirm the opening size, fixing method and required fittings with your supplier before installation.

01 Align the white rollers with the track




Locate the row of white rollers at the end of the folded screen. Bring the open end of the first track beside them and line up the rollers with the channel.

Focus on how the white rollers line up with the open channel.

Before you start, place the components on a flat, clean, protected surface. Keep the screen folded together and locate the rollers, end guides and track openings.

02 Guide the rollers into the track

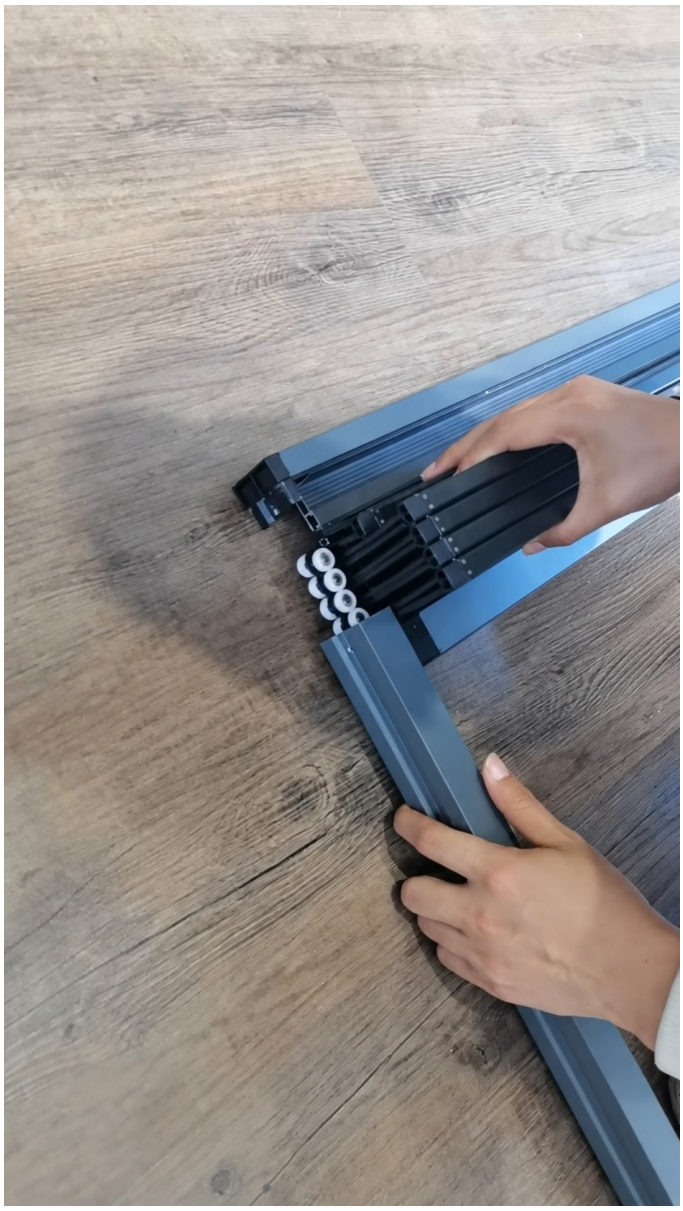

Support the folded screen with one hand and steady the track with the other. Gently adjust their position to guide the white rollers into the channel.

If a roller catches, ease it back and realign it. Do not force it.

03 Join and secure the first corner



Once the rollers are in the track, align its end with the adjoining frame section and gently join the two pieces. When the joint is fully seated, fit and tighten one fixing screw through the factory-drilled hole.

Every corner has a factory-drilled hole and must be secured with a fixing screw after joining. Use the screw size specified by the manufacturer.

04 Secure the other end of the first track



Move to the other end of the same track. Align the black corner connector with the adjoining frame section and join them fully. Fit and tighten one fixing screw through the factory-drilled hole.

Check that the fixing screw is tight before fitting the track at the opposite end of the screen.

05 Fit the end guides into the second track



At the opposite end of the folded screen, support the panels and line up the black end guides with the second track. Gently adjust the panels to guide the fittings into the channel.

Check that the guides are inside the channel, not resting against its outer edge.

06 Secure the near corner of the second track



Steady the track and align the black connector with the adjoining frame section, keeping the end guides in the channel. Once the corner is fully joined, fit and tighten one fixing screw through the factory-drilled hole.

Keep your fingers clear of the closing joint.

07 Secure the final corner and check the screws



Align and fully join the final corner at the other end of the second track. Fit and tighten one fixing screw through the factory-drilled hole. Then check that all four corners are aligned and all fixing screws are fitted and tight.

These screws secure the frame joints. They do not fix the frame into the doorway.

08 Support the frame and check the screen movement



With another person helping, hold the frame securely upright. Slowly pull the handle to extend the screen and check that it moves smoothly.

Keep the frame supported throughout. Stop and check the alignment if the screen catches.

Fixing the frame into the doorway is outside the scope of this guide. Follow your supplier’s installation instructions for fixings, hole positions, sealing and final checks.